



BATTERY INSTALLATION

Remove the lens by placing a coin in the side slot and twist until the two sides separate.

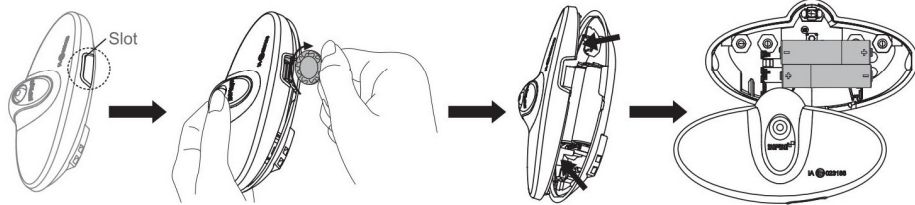


Fasten the tenons on the main unit and the lens then snap the two sides together.

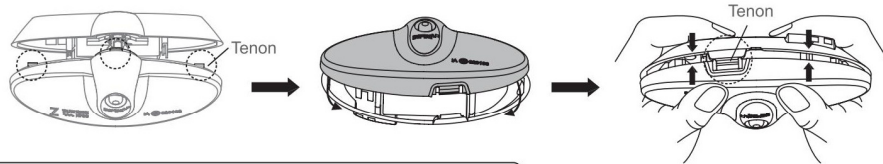

Caution:
Use only the specified type of batteries.
DO NOT use old battery with new one.
For your own safety, please do not operate the controls of the product while riding.

MOUNTING YOUR LIGHT ON CARRIER RACK

The light has two bolts on the back for mounting on your bike. The bolts can be width adjusted according to the size you need.

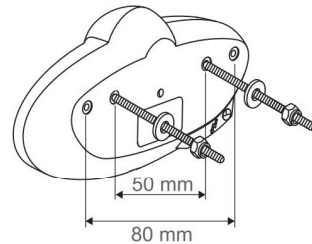

SPECIFICATIONS

| 0.5 WATT RED LED CARRIER LIGHT | | 5 Ø RED LED CARRIER LIGHT | | |
|--|---------------------------|--|----------------------------|------------------------|
| I-500P1 | I-500PG1 / I-500PF1 | I-500R1 | I-500RG1 / I-500RF1 | I-500M1 |
| 60 hrs (Flashing) 32 hrs (Constant) | 32 hrs (Constant) | 160 hrs (Flashing) 141 hrs (Constant) | 141 hrs (Constant) | Constant |
| I-500P2 | I-500PG2 / I-500PF2 | I-500R2 | I-500RG2 / I-500RF2 | I-500M2 |
| Auto 32 hrs (Constant) 60 hrs (Flashing) | Auto 32 hrs (Constant) | Auto 141 hrs (Constant) 160 hrs (Flashing) | Auto 141 hrs (Constant) | Standlight Constant |

Size: 121 X 65 X 35 mm
Weight: 70g (without battery)
Battery: 2 X AA (LR06)
(Only for battery version)
Bolt: 50 mm and 80 mm

PRODUCT WARRANTY





INFINI offers a Two-year Limited Warranty from the date of original purchase. Products are warranted to be free from manufacturing defects in materials and workmanship under normal use.
Batteries are covered by 90 days warranty (only for rechargeable light). To obtain warranty service, products should be returned with proof of purchase from an authorized retailer.




Manufactured by Chance Good Inf. Co., Ltd.
Quality System Registered to ISO 9001/14001
Website: www.infini.com.tw




MODE

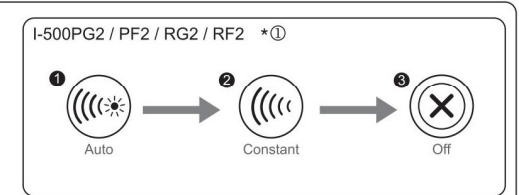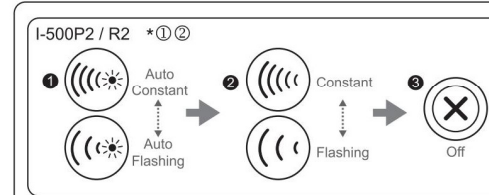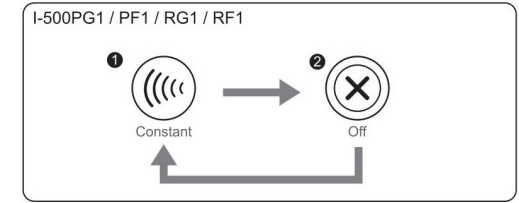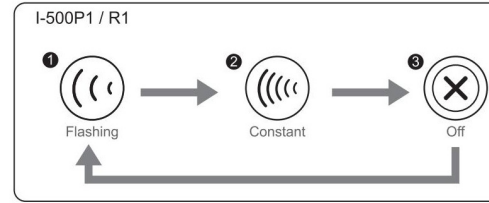


| | |
|----------------------|--|
| SLOW FLASHING | Auto Mode |
| FAST FLASHING | Regular Mode |
| CONSTANT | Low Battery Indicator *Please replace the battery once the low battery indicator shows. |

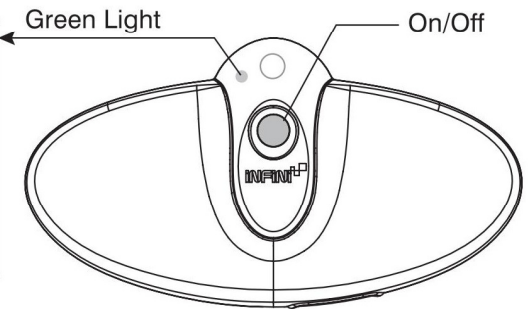

CHECK MODE STATUS

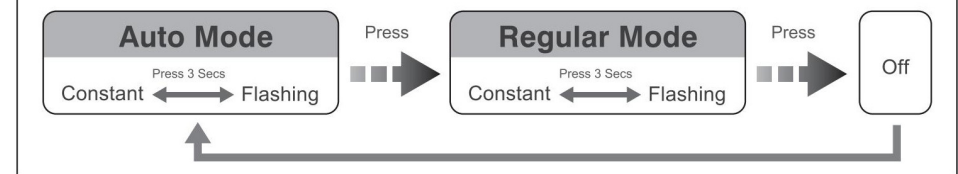


*① AUTO: Automatically turn on in the dark while riding and keep the light glowing for 4 mins after you stop.
*② MODE MEMORY FUNCTION: When you turn the light on, it lights up in the last lighting mode you used.

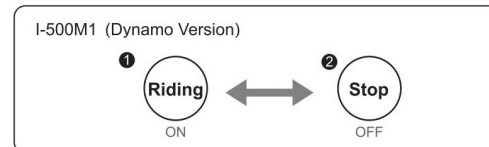

*③ STANDLIGHT: Keep the light glowing for 5 mins after you stop.


点灯モード

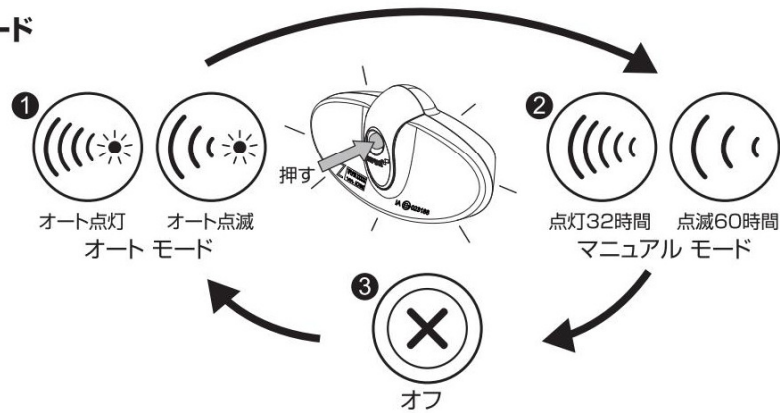

モードの切り替え


オートモード

ボタンを短く押し、インジケータ LEDが3秒間 "低速点滅" するとオートモードが起動します。オートモードでは、光センサーと振動センサーにより夜間走行時、自動で点灯し、4分間 停車すると自動で消灯します。点灯/点滅の切替は、ボタンを1秒間押し続けます。

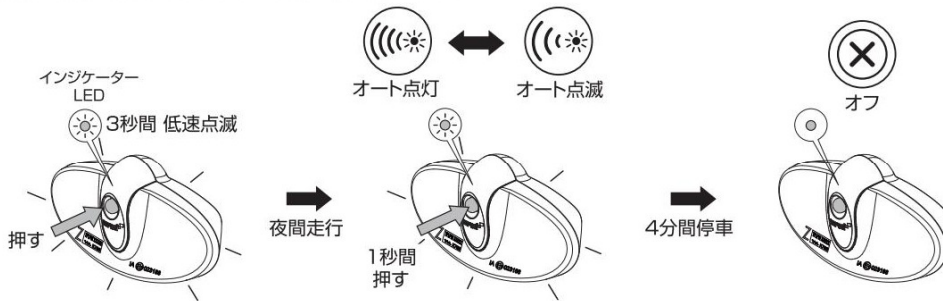


マニュアルモード

オートモード起動中にボタンを短く押し、インジケータ LEDが3秒間 "高速点滅" するとマニュアルモードに切り替わります。点灯/点滅の切替は、ボタンを1秒間押し続けます。

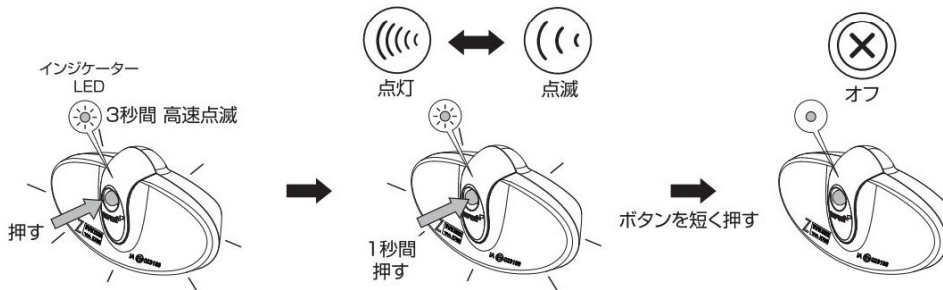

バッテリーの交換


ライト下部の凹部に硬貨等を差し込んで回し、レンズと本体を取外します。付属の単3乾電池2本を⊕⊖の極性を間違えないように正しく入れ、レンズ上部の突起を本体に差し込んで、元通りにレンズと本体を取付けます。

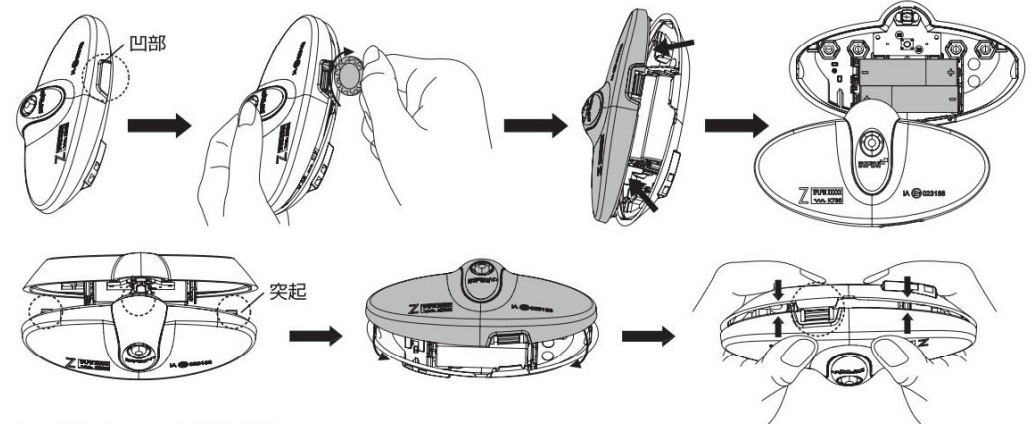

キャリアへの取付け

ライト下部の凹部に硬貨等を差し込んで回し、レンズと本体を取外します。本体のボルト差込部分に穴を開け、ボルトを差込みます。レンズ上部と下部の突起を本体に差し込んで、元通りにレンズと本体を取付けます。付属のワッシャーとナットを使用し、キャリアに取付けます。

※ ご使用になるキャリアのキャリアライト取付穴の間隔に合わせて、50mm幅 / 80mm幅のどちらかを選択してください。

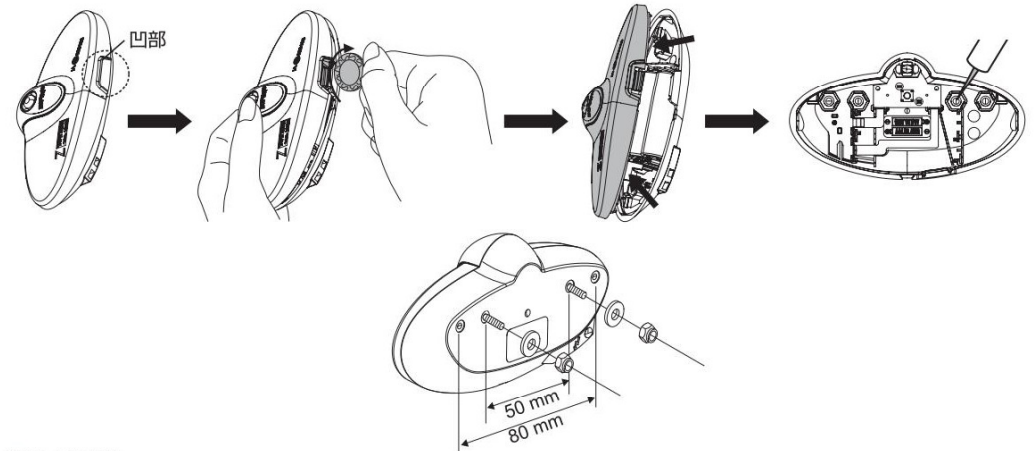

製品仕様

オート点灯/点滅、マニュアル点灯/点滅の4モード
 点灯時間：マニュアル点灯 32時間、
 マニュアル点滅 60時間
 サイズ：L35 x W121 x H65mm
 重量：70g (電池を除く)
 電池：単3乾電池 × 2本
 ボルト間隔：50mm / 80mm

Manufactured by: Chance Good Ent. Co., Ltd.
 Quality System Registered to: ISO 9001 / 14001
 Website: www.infini.com.tw

注意

単3乾電池のみをご使用ください。
 新しい乾電池と古い乾電池を同時に
 使用しないでください。



MADE IN TAIWAN